Register your product and get support at

www.philips.com/welcome

AC4074, AC4072

PHILIPS

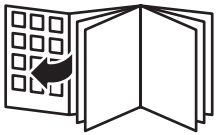

1

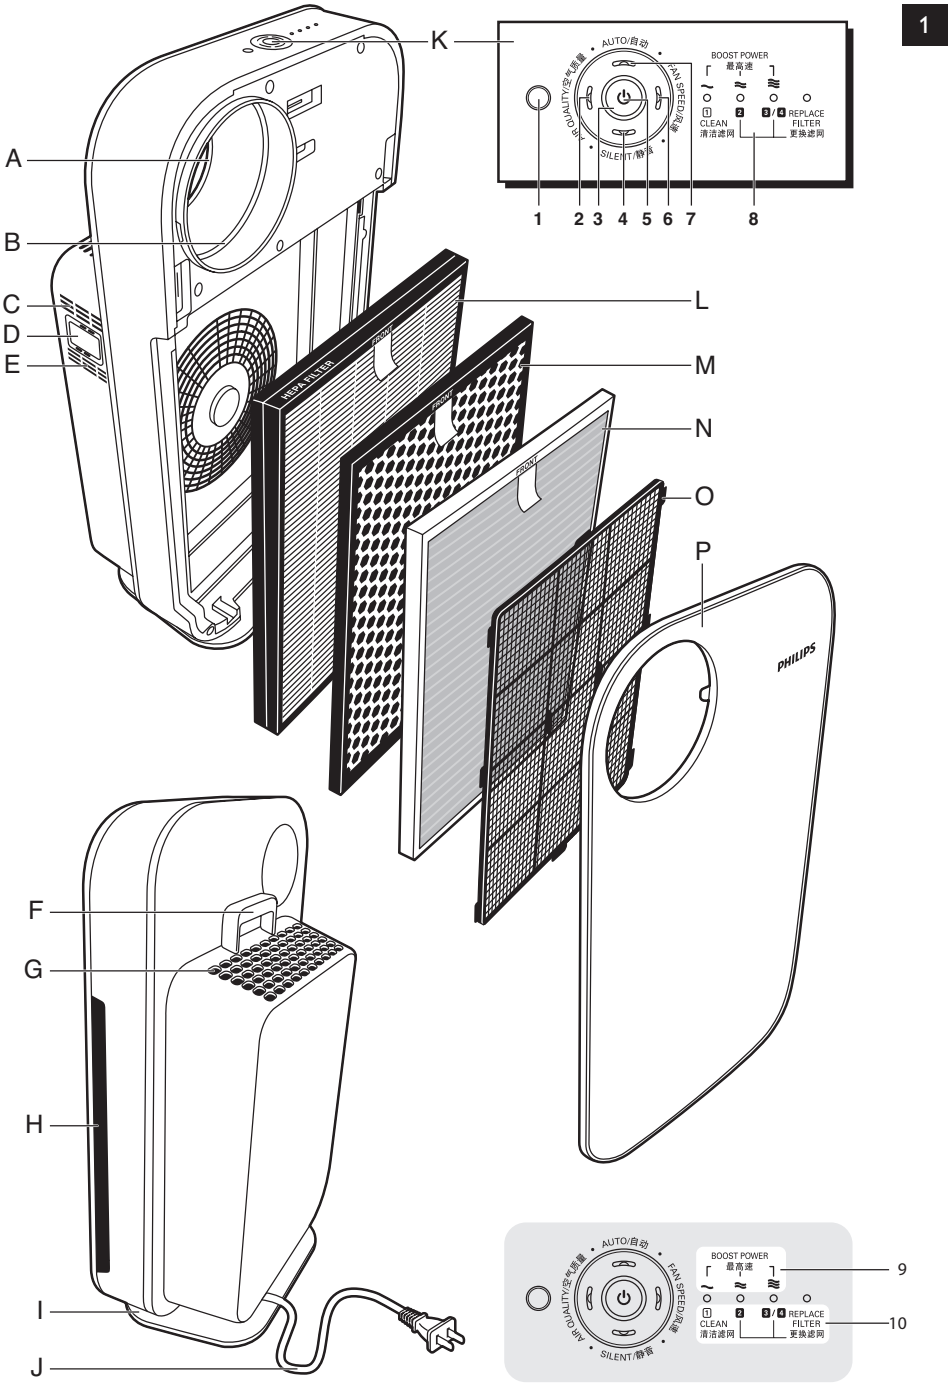
K
A
B
C
D
E
L
M
N
O
P
F
G
H
I
J
AUTO/自动
AIR QUALITY/空气质量
FAN SPEED/风速
SILENT/静音
BOOST POWER
最高速
1 CLEAN
清洁滤网
2
3 / 4 REPLACE FILTER
更换滤网
1
2 3 4 5 6 7
8
9
10
HEPA FILTER
PHILIPS

ENGLISH 6
繁體中文 23
简体中文 38

AC4074,AC4072

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.
With this new CleanAir System you breathe cleaner air. For the best results, place the CleanAir System in a room where you spend most of your time, e.g. the living room or bedroom.
Wherever there are people, plants or pets, there are airborne particles that can affect your well-being, especially if you suffer from allergies. Because of these particles, the air inside a room may be more polluted than the air in a large city.
Normally, particles are invisible and odourless. Nevertheless they can affect your health. The CleanAir System reduces the amount of animal dander and industrial pollutants in the air, and therefore improves the air quality. It also filters out ultrafine particles larger than 20 nanometres, including bacteria and some viruses. According to publications of the World Health Organization, the avian and human influenza viruses and the Legionella bacterium are larger than 20 nanometres.

Filtration in several stages

The air cleaner has a unique multi-stage filtration system that guarantees the best air quality:

- Stage 1: The pre-filter has been treated with antibacterial substances. It catches big particles like human hair, pet hair etc.
- Stage 2: The formaldehyde filter (supplied with AC4074) removes formaldehyde and other volatile organic compounds (VOCs). In combination with the HEPA filter, the multi-care filter filters out dust, pollen and ultrafine particles larger than 20 nanometres, including bacteria and some viruses. According to publications of the World Health Organization, the avian and human influenza viruses and Legionella bacterium are larger than 20 nanometres.

Note: The AC4074 and AC4072 are suitable for both the formaldehyde filter and the multi-care filter. When you replace the filter present in your type, you can choose the filter (formaldehyde or multi-care) that suits your needs best.

- Stage 3: The activated carbon filter removes odours and harmful gases effectively.
- Stage 4: The high-performance composite HEPA filter with anti-bacterial coating effectively removes fine dust and cigarette smoke, while the antibacterial and anti-mould functions of organic antibacterial materials eliminate germs and mould.

General description (Fig. 1)

A Air quality light ring
B Fan speed indicator (AC4074 only)
C Air quality sensor outlet
D Air quality sensor
E Air quality sensor inlet
F Handle
G Air outlet
H Air inlet
I Cord storage facility
J Mains cord

K Control panel
- **1** Light sensor for night mode
- **2** AIR QUALITY on/off button with light
- **3** Power on/off button
- **4** SILENT button with light
- **5** Power-on light
- **6** FAN SPEED button with light
- **7** AUTO button with light
- **8** Fan speed lights (1, 2, 3 and boost power)/filter replacement lights
- **9** FAN SPEED indications
- **10** REPLACE FILTER indications

L Filter 4: HEPA filter
M Filter 3: activated carbon filter
N Filter 2: formaldehyde filter (supplied with AC4074) or multi-care filter (supplied with AC4072)
O Filter 1: pre-filter
P Front panel

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water or any other liquid or a (flammable) detergent to avoid electric shock and/or a fire hazard.

Warning

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning or use of an extractor hood or fan while cooking.
- If the wall socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure you plug the appliance into a properly connected wall socket.

- Always place and use the appliance on a dry, stable, level and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance and do not sit on the appliance.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle at the back of the appliance.
- Do not insert your fingers or objects into the air outlet.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before you clean it.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2m away from electrical appliances that use airborne radio waves such as TVs, radios and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Before first use

Placing the filters

The appliance comes with all filters fitted inside, but you have to remove the packaging of the filters before you can use the appliance. Remove all filters, unpack them and place them back into the appliance as described below.

Tip: Place the appliance against a wall for more stability when you remove or insert filters.

Note: Make sure you insert the filters in the correct position.

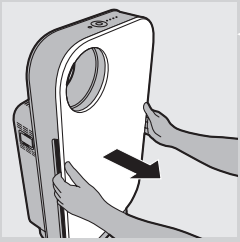

1 Place your fingers in the recesses of the side panels and gently pull the top part of the front panel towards you. Then lift the hooks at the bottom of the panel out of the bottom of the appliance.

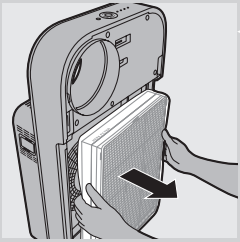

2 Remove all the filters from the appliance.

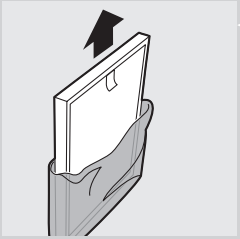

3 Remove all packaging material from the filters.

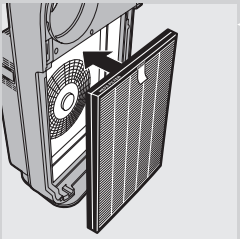

4 Put filter 4 (HEPA filter) back into the appliance.

Note: Make sure that the side with the tag is pointing towards you.

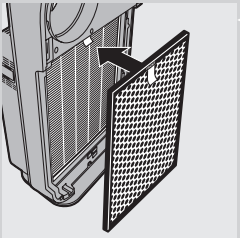

5 Put filter 3 (activated carbon filter) back into the appliance.

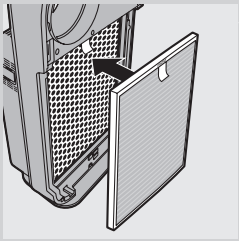

6 Put filter 2 (formaldehyde filter for AC4074 or multi-care filter for AC4072) back into the appliance.

Note: Make sure that the side with the tag is pointing towards you.

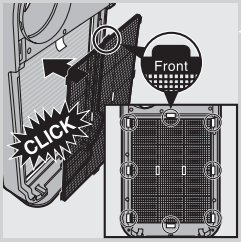

7 Place filter 1 (pre-filter) in the appliance.

Note: Make sure that the side with the two projections is pointing towards you.

Note: Make sure that all hooks are properly attached to the appliance.

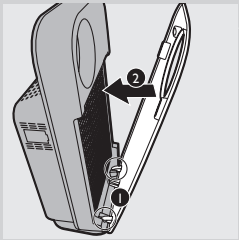

8 To reattach the front panel, insert the bottom hooks into the bottom of the appliance first (1). Then push the panel against the body of the appliance (2).

Using the appliance

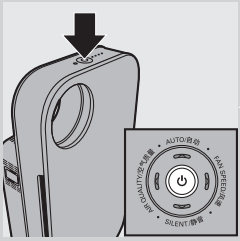

1 Put the plug in the wall socket

- All lights go on twice and you hear a beep. Then the lights go out again.

2 Press and hold the on/off button for 2 seconds to switch on the appliance.

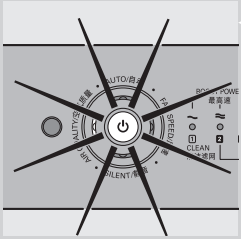

- The power-on light and the AIR QUALITY light on the control panel go on.

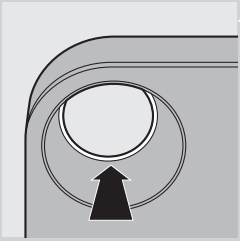

◗ The air quality light ring shows the quality of the air.

Air quality indication

Colour	Air quality
Blue	very good
Deep purple	good
Purple	fair
Red	bad

To switch off the air quality light ring, press the AIR QUALITY button.

Note: The air quality light ring automatically goes on when the appliance is switched on.

◗ The appliance automatically starts operating in the AUTO mode.

To switch off the appliance, press and hold the on/off button again until the power-on light goes out and unplug the appliance.

Note: When the humidity level in the room is very high, it is possible that condensation develops on the air quality sensor. As a result, the AIR QUALITY light on the control panel and the air quality light ring may indicate that the air quality is bad even though the air quality is good. In this case, the auto mode causes the appliance to run at high fan speed. You can solve this by cleaning the air quality sensor. If condensation develops frequently during periods of high humidity, we advise you to use one of the manual speed settings.

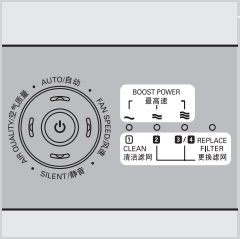

Fan speed lights/filter replacement lights

- The lights on the right-hand side of the control panel have a dual function: they either indicate the fan speed or they indicate that the filters should be replaced or cleaned.
- When lights 1 to 3/4 light up continuously, they indicate the current fan speed.
- When light 1 flashes, you have to clean the pre-filter. When lights 2 and/or 3/4 flash, you have to replace these filters. If lights 2 and/or 3/4 flash, the REPLACE FILTER light also flashes (see chapter 'Filter replacement' for more information).
- When lights 2, 3/4 and the REPLACE FILTER light are on continuously, the appliance is locked (see chapter 'Filter replacement lock' for more information).

Adjusting the air quality sensor sensitivity

People with certain health problems (e.g. allergies or asthma) have a greater need for healthy air. For this reason, the air cleaner allows you to

adjust the sensitivity of the air quality sensor. When it is set to a higher sensitivity level, the appliance already starts cleaning the air at lower pollution levels to make the air even cleaner.
There are 3 sensitivity levels:
- standard
- sensitive
- extra sensitive

The pollution sensor is set to standard sensitivity. You can adjust the sensitivity of the air quality sensor in the following way:

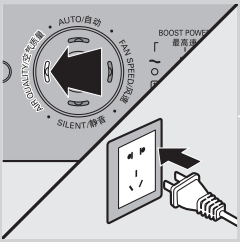

1 If the appliance is already plugged in, unplug the appliance and wait for a few minutes.

2 Press the AIR QUALITY button and simultaneously put the mains plug in the wall socket.
- The appliance beeps twice and one of the fan speed lights flashes to show the current sensitivity level of the air quality sensor.

Sensitivity level:

Fan speed light	Sensitivity level
1	extra sensitive
2	sensitive
3	standard

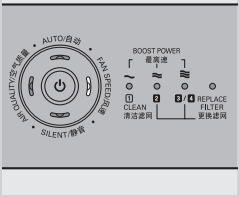

3 Press the FAN SPEED button to adjust the sensitivity level of the air quality sensor.
- One of the fan speed lights flashes to show the set sensitivity level of the air quality sensor.

4 Press and hold the on/off button to switch off the appliance.

Note: When you change the sensitivity level, the appliance automatically starts operating at the set sensitivity level whenever you switch on the appliance.

Auto mode

When the appliance is switched on, the built-in air quality sensor automatically measures the ambient air quality. When the auto mode is activated, the appliance selects the most appropriate fan speed for the measured air quality.

1 Press and hold the on/off button for 2 seconds to switch on the appliance.

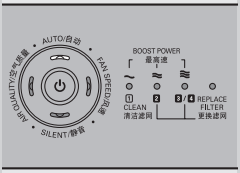

2 Press the AUTO button to activate the auto mode.

Note: When the appliance is operating in another mode and you want to activate the auto mode, simply press the AUTO button.

- The AUTO light goes on.

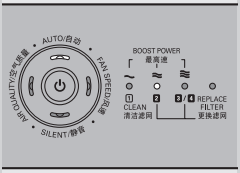

- The FAN SPEED light indicates at which fan speed the appliance is operating.

Note: When the air quality is very good and the appliance operates at a very low fan speed, the FAN SPEED light for the lowest speed setting does not go on. In this case only the power-on light and the AUTO light are on.

Note: The built-in air quality sensor measures the air quality and automatically selects the appropriate speed setting to guarantee the best possible air quality in your room. When the air is clean, the appliance stops running. When the air quality deteriorates, the appliance starts running at a low fan speed and noise level so that the energy consumption is minimised.

Night mode

The appliance works in harmony with its surroundings. In auto mode, the appliance automatically switches to night mode when the room in which it is operating becomes dark. When the room has been dark for 3 minutes, the lights of the appliance go out, the fan speed and noise level are reduced and the energy consumption is minimised. If the room becomes bright again for 5 minutes or longer, the appliance resumes normal operation.
In night mode, the automatic control is still active. If the air is clean, the lights and the fan are off. If the air quality deteriorates, the appliance is activated and the lights and the fan come on again.

Note: The night mode only works when the appliance is operating in the auto mode.

Fan speed

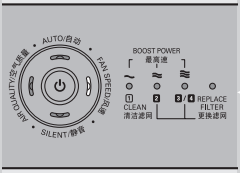

If you do not use the auto mode, you can select the desired fan speed yourself.

1 Press and hold the on/off button for 2 seconds to switch on the appliance.

2 Press the FAN SPEED button one or more times to select the desired fan speed.

- The corresponding fan speed light and the indications above the lights show the set fan speed (1, 2, 3 or boost power).

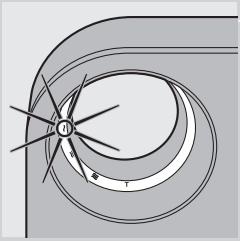

- AC4074 only: The corresponding fan speed light in the fan speed indicator goes on.

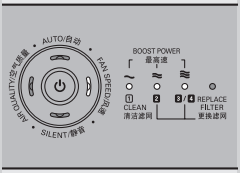

Note: Select boost power if you need an extra strong airflow when the air in the room is very dirty. All three fan speed lights go on.

Silent mode

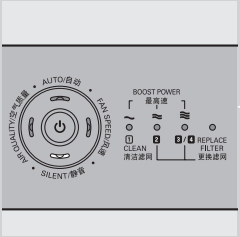

When you use the appliance in silent mode, it operates very quietly.

1 Press and hold the on/off button for 2 seconds to switch on the appliance.

2 Press the SILENT button to activate the silent mode.
- The SILENT light goes on.

If you want to go back to the FAN SPEED mode or AUTO mode, simply press the FAN SPEED or AUTO button.

Cleaning

Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.

Never use aggressive or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Only the pre-filter is washable. All other filters are NOT washable.

Body of the appliance

Regularly clean the inside and outside of the body to prevent dust from collecting on the inside and outside.

1 Wipe away dust with a soft dry cloth from the body of the appliance.

2 Clean the air inlet and the air outlet with a soft dry cloth.

Pre-filter

The pre-filter is washable.

- Clean the pre-filter when the first filter replacement light flashes to ensure optimal functioning of the appliance.

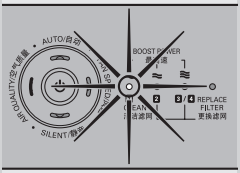

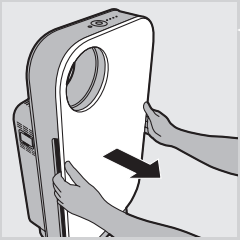

1 Place your fingers in the recesses of the side panels and gently pull the top part of the front panel towards you. Then lift the hooks at the bottom of the panel out of the bottom of the appliance.

2 To remove the pre-filter, grab the two projections and pull the filter towards you.

3 Wash the pre-filter under a running tap. If the pre-filter is very dirty, use a soft brush to brush away the dust.

Tip: Alternatively, you can clean the pre-filter by removing the dust with a vacuum cleaner.

4 Air-dry the pre-filter.

Note: Make sure that the pre-filter is completely dry. If it is still wet, bacteria may multiply in it and shorten the lifetime of the pre-filter.

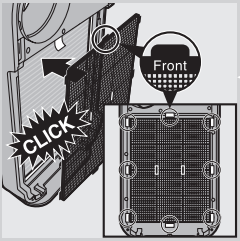

5 Put the pre-filter back into the appliance. Attach all hooks properly to the appliance.

Note: Make sure that the side with the two projections is pointing towards you.

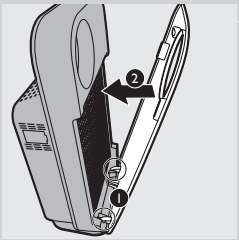

6 To reattach the front panel, insert the bottom hooks into the bottom of the appliance first (1). Then push the panel against the body of the appliance (2).

Air quality sensor

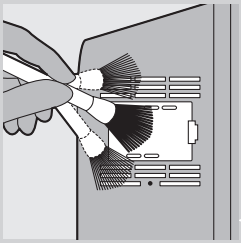

Clean the air quality sensor every 2 months for optimal functioning of the appliance. Clean it more frequently if you use the appliance in a dusty environment.

Note: When the humidity level in the room is very high, it is possible that condensation develops on the air quality sensor. As a result, the AIR QUALITY light on the control panel and the air quality light ring may indicate that the air quality is bad even though the air quality is good. In this case you have to clean the air quality sensor or use one of the manual speed settings.

1 Clean the air quality sensor inlet and the air quality sensor outlet with a soft brush.

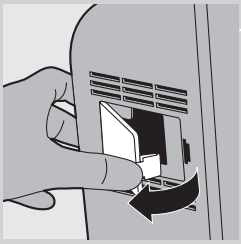

2 Remove the air quality sensor cover.

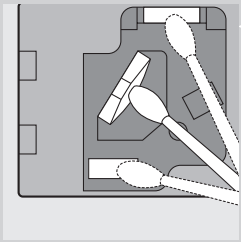

3 Clean the air quality sensor, the dust inlet and the dust outlet with a lightly moistened cotton swab.

4 Dry them with a dry cotton swab.

5 Reattach the air quality sensor cover.

Filter replacement

Filter maintenance

This air cleaner is equipped with the HealthyAirProtect Lock feature to ensure that the filters are in optimal condition when the appliance is operating. When one of the filters is almost full and has to be cleaned or replaced, the appropriate filter replacement light starts to flash. When you do not replace filter 2, filter 3 and/or filter 4, the appliance stops operating and the appliance is locked.
When the appliance is locked, the filter replacement light of the filter concerned lights up on continuously.

Note: Only replace a filter when the corresponding filter replacement light flashes. If you replace the filter before the filter replacement light starts flashing, the lifetime counter will not be reset but will continue counting the lifetime of the previous filter. As a result, the filter replacement light will start flashing much too soon.

Filter replacement lights

The filter replacement lights indicate which filter has to be cleaned or replaced.

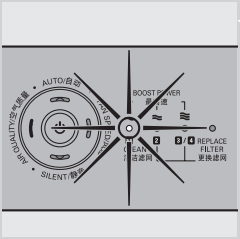

- Filter replacement light 1 flashes: filter 1 (the pre-filter) has to be cleaned. See chapter 'Cleaning' for further instructions.

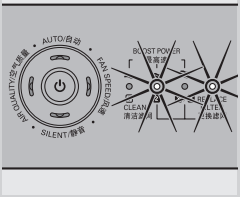

- Filter replacement light 2 flashes: filter 2 (the formaldehyde filter (supplied with AC4074) or multi-care filter (supplied with AC4072)) has to be replaced.

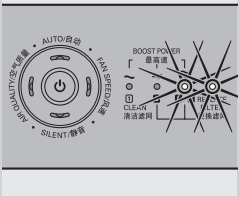

- Filter replacement light 3/4 flashes: the activated carbon filter and the HEPA filter have to be replaced.

Note: The HEPA filter and the activated carbon filter have a similar lifetime. Therefore they have to be replaced at the same time.

Filter replacement lock

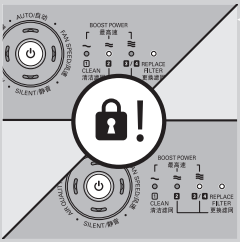

If you do not replace the filter in time, the appliance stops operating approx. 2 weeks after the filter replacement light started flashing. When the appliance is locked, it does not operate until you have replaced the full filter and pressed the reset button.

Note: When filter replacement lights 2 or 3/4 and REPLACE FILTER on the control panel are on continuously, the appliance is locked (see section 'Filter maintenance' in this chapter for more information).

How long it takes before the appliance is locked depends on the operating time and speed level selected after the filter replacement alert.
Approximately 1 day before the appliance locks, it beeps every 30 minutes to inform you that one of the filters needs to be replaced.
When the appliance is locked, you hear a beep when you press any button.
You can switch off the appliance by pressing and holding the on/off button.
If the appliance is locked:

1. Check which filter needs to be replaced (see section 'Filter replacement alerts').
2. Switch off the appliance and unplug it.
3. Replace the appropriate filter (see section 'Replacing the filters').

Replacing the filters

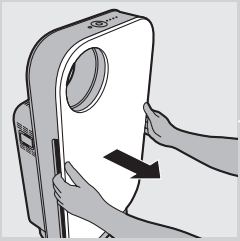

Tip: Place the appliance against a wall for more stability when you remove or insert filters.

1 Switch off the appliance and unplug it.

2 Place your fingers in the recesses of the side panels and gently pull the top part of the front panel towards you. Then lift the hooks at the bottom of the panel out of the bottom of the appliance.

3 To remove filter 1 (pre-filter), grab the two projections and pull the filter towards you.

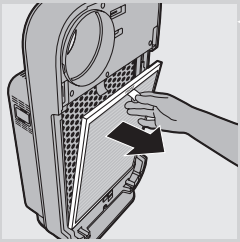

4 To remove filter 2 (formaldehyde filter for AC4074 or multi-care filter for AC4072), grab its tag and pull it towards you.

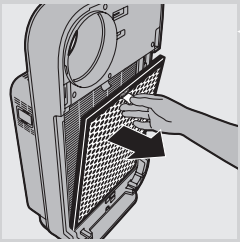

5 To remove filter 3 (activated carbon filter), grab its tag and pull it towards you.

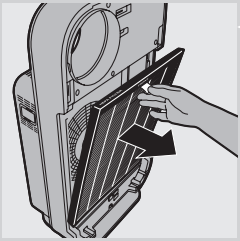

6 To remove filter 4 (HEPA filter), grab its tag and pull it towards you.

7 Discard the filter that needs to be replaced and unpack the new filter.

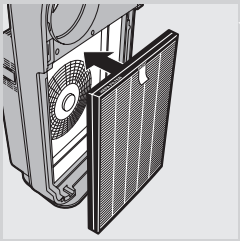

8 Put filter 4 (HEPA filter) back into the appliance.

Note: Make sure that the side with the tag is pointing towards you.

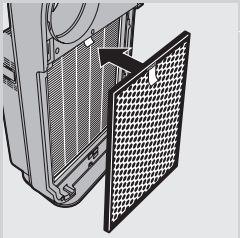

9 Put filter 3 (activated carbon filter) back into the appliance.

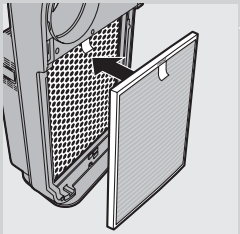

10 Put filter 2 (formaldehyde filter for AC4074 or multi-care filter for AC4072) back into the appliance.

Note: Make sure that the side with the tag is pointing towards you.

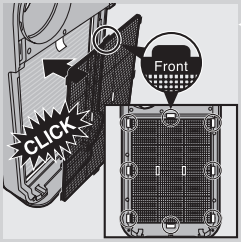

11 Put filter 1 (pre-filter) back into the appliance.

Note: Make sure that the side with the two projections is pointing towards you.

Note: Make sure that all hooks are properly attached to the appliance.

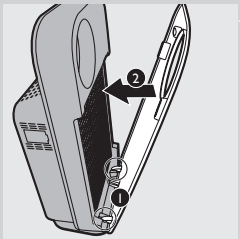

12 To reattach the front panel, insert the bottom hooks into the bottom of the appliance first (1). Then push the panel against the body of the appliance (2).

13 Put the plug in the wall socket and switch on the appliance again.

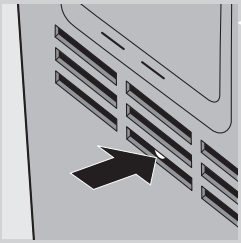

14 Press the filter reset button with a thin tool.

Note: You do not need to press the filter reset button after cleaning filter 1 (pre-filter).

Note: You cannot reset the appliance when you replace a filter before its filter replacement light starts flashing.

Note: You cannot reset the appliance if it is not plugged in and switched on.

Storage

1 To store the mains cord, wind it round the cord storage facility at the bottom of the appliance.

Accessories

New filters are available under the following type numbers:

Filter	Type number
Filter 2: Formaldehyde filter	AC4142
Filter 2: Multi-care filter	AC4141
Filter 3: Activated carbon filter	AC4143
Filter 4: HEPA filter	AC4144

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible solution
The appliance doesn't work.	You ignored the filter replacement alerts. You did not replace the filter when the filter replacement light started flashing and did not respond when the appliance started to beep every 30 minutes after approx. 2 weeks. As a result, the appliance is now locked and you have to replace the filter and reset the appliance (see chapter 'Filter replacement') so that the appliance can operate again.
No air comes out of the air outlet	The appliance is not switched on. Put the plug in the wall socket and switch on the appliance.
	The air quality is good and the auto mode is activated. In this case, the appliance switches off automatically when the air is clean to save electricity.
The fan speed does not change when the AUTO mode is activated.	When the room becomes dark, the night mode is activated automatically when the appliance is in auto mode. In this case, the fan speed is set to a very low level. If you want to change the fan speed, press the FAN SPEED button one or more times to set the desired fan speed.
The airflow that comes out of the air outlet is significantly weaker than before.	The pre-filter is dirty. Clean the pre-filter (see chapter 'Cleaning').
	You haven't removed all packaging material from the filters. Make sure that you have removed all packaging material.
The air quality does not improve, even though the appliance has been operating for a long time.	One of the filters has not been placed in the appliance. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) HEPA filter, 2) activated carbon filter, 3) formaldehyde filter (supplied with AC4074) or multi-care filter (supplied with AC4072), 4) pre-filter.
	The air quality sensor is wet. The humidity level in your room is high and causes condensation. Make sure that the air quality sensor is clean and dry (see chapter 'Cleaning').
	The room in which you run the appliance is larger than 55m², which is the maximum size at which this air cleaner can operate effectively.
The colour of the air quality light ring and the air quality light always stays the same.	The air quality sensor is dirty. Clean the air quality sensor (see chapter 'Cleaning').
	There is not enough ventilation in the room. Open a window, to improve the air circulation.
I need cleaner air because I have an allergy.	You can change the air quality sensor sensitivity (see chapter 'Using the appliance') to make the air cleaner clean the air even better.
The appliance is extra loud.	You haven't removed all packaging material from the filters. Make sure that you have removed all packaging material.
The appliance still indicates that I need to replace a filter, but I already did.	Perhaps you did not press the filter reset button properly. Plug in the appliance, press and hold the on/off button and press the filter reset button with a flat tool.

Problem	Possible solution
The appliance stops operating, although the power-on light is still on.	The built in quality sensor has determined that the air quality is good and that the air does not need to be cleaned anymore. When the air quality deteriorates, the appliance starts running at a low fan speed and noise level so that the energy consumption is minimised.

簡介

恭喜您購買本產品並歡迎加入飛利浦！請於 www.philips.com/welcome 註冊您的產品，以善用飛利浦提供的支援。
有了空氣清淨系統，您就可以呼吸清淨空氣。為了達到最佳效果，請將空氣清淨系統放在您最常待的房間內，例如您的起居室或臥室。
只要是有人、植物或寵物的地方，空氣當中就會有影響您健康的微粒存在，特別是若您同時受過敏之苦。因為這些微粒之故，您室內的空氣污染，可能比大都市的污染情況嚴重。
通常微粒本身無味，肉眼亦無法看見。儘管如此，卻會危害您的健康。空氣清淨系統能降低空氣當中的動物皮屑以及工業污染物，藉此改善空氣品質。同時也能濾除大於 20 奈米的超微粒，其中包括病毒與細菌。根據世界衛生組織的出版物指出，禽鳥類與人類的流感病毒大於 20 奈米。

多階段過濾

本空氣清淨機具有多階段過濾系統，確保最佳空氣品質：

- 階段 1：前層濾網經抗菌物質處理，可捕捉人類頭髮、寵物毛髮等較大粒子。
- 階段 2：甲醛濾網 (供應予 AC4074) 可去除甲醛及其他揮發性有機物質 (VOCs)。相較於 HEPA 濾網，全效濾網可濾除灰塵、花粉與大於 20 奈米的超微粒，其中包括病毒與細菌。根據世界衛生組織的出版物指出，禽鳥類與人類的流感病毒以及退伍軍人菌 (Legionella) 大於 20 奈米。

注意： AC4074 和 AC4072 適用甲醛濾網及全效濾網。更換您機型中的濾網時，您可以選擇最適合您的濾網類型 (甲醛或全效濾網)。

- 階段 3：活性碳濾網可有效去除異味與有害氣體。
- 階段 4：高效能複合 HEPA 濾網有抗菌塗層，可有效去除微塵與香煙味，而有機抗菌材質的抗菌防霉功能可去除細菌與霉菌。

一般說明 (圖 1)

A 空氣品質指示燈
B 風扇速度指示器 (僅限 AC4074)
C 空氣品質感測器出風口
D 空氣品質感測器
E 空氣品質感測器進風口
F 手柄
G 出風口
H 進風口
I 電源線收納裝置
J 電源線
K 控制面板
  1 光線感應器 (可進入夜間模式)
  2 空氣品質開/關 (On/Off) 按鈕附指示燈
  3 電源開關
  4 靜音 (SILENT) 按鈕附指示燈
  5 電源開啟指示燈
  6 風扇速度 (FAN SPEED) 按鈕附指示燈
  7 自動 (AUTO) 按鈕附指示燈
  8 風速指示燈 (1、2、3，及超高速)/更換濾網指示燈
  9 風速 (FAN SPEED) 指示
  10 更換濾芯 (REPLACE FILTER) 指示

L 濾網 4：HEPA 濾網
M 濾網 3：活性碳濾網
N 濾網 2：甲醛濾網 (供應與 AC4074) 或全效濾網 (供應與 AC4072)
O 濾網 1：前層濾網
P 正面護板

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

危險

- 請勿讓水或其他液體，或是易燃清潔劑進入產品內，以避免電擊和 / 或火災。
- 請勿用水或其他液體，或是 (易燃) 清潔劑清潔產品，以避免電擊和 / 或火災。

警示

- 在連接本產品的電源之前，請確認本產品機體底部所標示的電壓與當地的室內電壓是否相同。
- 如果電線損壞，則必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 當插頭、電線或產品本身受損時，請勿使用產品。
- 基於安全考慮，在缺乏監督及適當指示之下，本產品不適用於孩童及任何身體、知覺、或心理功能障礙者，或缺乏使用經驗及知識者。
- 請勿讓孩童使用本產品或當成玩具。
- 請勿在出風口上方或進風口前面放置物品，擋住進出風口。

警告

- 本產品不可用來作為維持良好通風的設備、替代吸塵器清潔，或烹調時用來當作抽油煙機使用。
- 如果供應產品電力的電源插座接頭不良，產品插頭會發熱。請確定將產品插入接頭良好的插座。
- 請將本產品放置在乾燥平穩的水平面上使用。
- 產品的背面及側面須至少保留 20 公分的間隔距離，頂部則至少保留 30 公分的間隔距離。
- 產品頂部請勿堆放任何物品，請勿坐在產品上。
- 請勿將本產品放置在冷氣機正下方，以免冷氣機滴水，造成產品發生水滴凝結的現象。
- 請在開啟產品電源前，先確認所有濾網皆已正確安裝。
- 僅使用本產品專用的飛利浦原廠濾網，請勿使用其他濾網。
- 切勿使用堅硬的物體敲打本產品 (特別是進風口及出風口)。
- 請務必使用產品背面的握柄提起或搬動產品。
- 請勿將手指或任何物體放入出風口。
- 當您使用室內噴霧式驅蟲劑或在充滿油漬、燒香、香煙的火星或化學煙霧的地方時，請勿使用本產品。
- 請勿在氣體用品、加熱裝置或壁爐附近使用本產品。
- 使用完畢後或進行清潔之前，請務必先拔除電源插頭。
- 請勿在溫差變化極大的室內使用本產品，因為室溫差距太大會造成本產品內部凝結水珠。
- 請將本產品遠離使用無線電電波的電子儀器至少 2 公尺以避免干擾，例如電視、無線電廣播、無線電信號控制的時鐘。
- 本產品為家用產品，僅限於在正常操作環境下使用。

- 請勿在極為潮濕或周遭溫度很高的環境下使用本產品，例如浴室、廁所或廚房。
- 本產品無法清除一氧化碳 (CO)或氡氣 (Rn)。發生燃燒意外及危險化學物品意外時，本產品無法當作安全裝置使用。

電磁波 (EMF)

本飛利浦產品符合電磁波 (Electromagnetic fields，EMF) 所有相關標準。只要使用方式正確並依照本使用手冊之說明進行操作，根據現有的科學研究資料，使用本產品並無安全顧慮。

第一次使用前

放置濾網

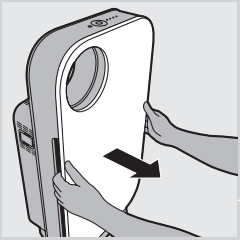

本產品所有隨附的濾網皆已妥善安裝在機體內，但是在使用前，必須先拆下濾網包裝。請先移除所有濾網，拆下濾網包裝，然後把濾網放回產品中，如下所述。

提示： 取出或裝入濾網時，將本產品靠牆擺放可獲得較穩定的支撐。

注意： 請確定濾網裝入正確的位置。

1 將手指放入兩邊護板的凹處，朝自己的方向輕輕拉出產品正面護板的頂部。然後將護板底部的扣鉤自產品底部提起。

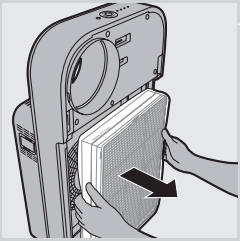

2 從產品內取出所有濾網。

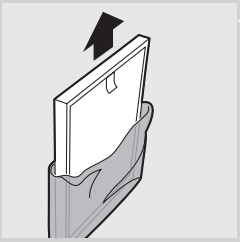

3 拆下濾網所有包裝材料。

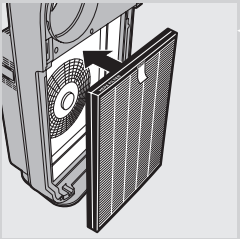

4 將濾網 4 (HEPA 濾網) 裝回產品。

注意： 請確認有拉片的那一側朝向自己。

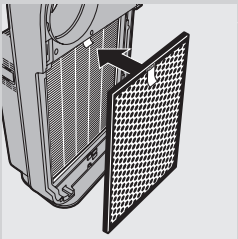

5 將濾網 3 (活性碳濾網) 裝回產品。

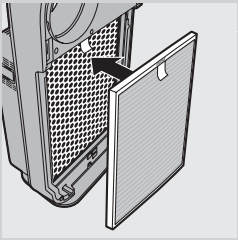

6 將濾網 2 (AC4074 的甲醛濾網或 AC4072 的全效濾網) 裝回產品。

注意： 請確認有拉片的那一側朝向自己。

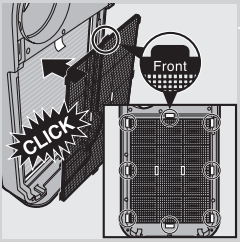

7 將濾網 1 (前層濾網) 裝回產品。

注意： 請確認有兩個凸出部分的那一側朝向自己。

注意： 請確認所有扣鉤皆已正確裝入產品。

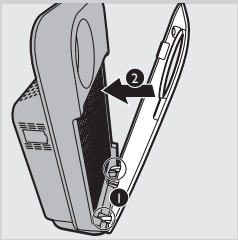

8 若要重新裝入正面護板，先將底部扣鉤裝入產品底部 (1)，然後將護板推回產品機體 (2)。

使用此產品

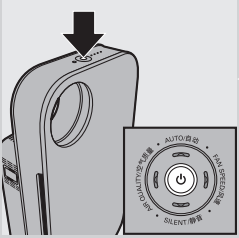

1 將插頭插入電源插座

◗ 所有指示燈亮起兩次，並發出嗶聲，然後指示燈再次熄滅。

2 按住開關 (On/Off) 按鈕 2 秒鐘，即可開啟產品電源。

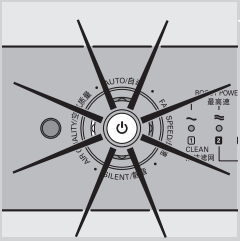

- 控制面板上的電源指示燈與空氣品質 (AIR QUALITY) 指示燈會亮起。

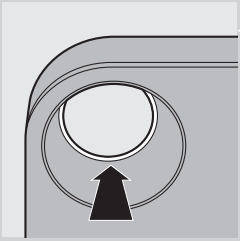

- 空氣品質指示燈會顯示空氣品質。

空氣品質指示

顏色	空氣品質
藍色	優良
深紫色	良好
紫色	普通
紅色	不良

若要關閉空氣品質指示燈，請按下空氣品質 (AIR QUALITY) 按鈕。

注意： 產品電源開啟後，空氣品質指示燈就會自動亮起。

- **本產品會在自動 (AUTO) 模式下自動開始運作。**

若要關閉產品電源，請再次按下開關 (On/Off) 按鈕不動，等到電源開啟指示燈熄滅，將產品的插頭拔除。

注意： 室內濕度等級很高的時候，空氣品質感測器上可能會凝結水滴，如此一來，即使空氣品質良好，控制面板上的空氣品質 (AIR QUALITY) 指示燈及空氣品質指示燈圈可能會顯示空氣品質不良。在此情況下，自動模式會讓產品風扇高速運轉。您可以清潔空氣品質感測器來解決此問題。如果高濕度期間經常發生水滴凝結問題，建議您使用手動風速設定。

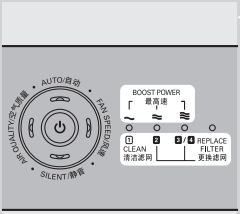

風扇速度指示燈/更換濾網指示燈

- 控制面板右側的指示燈有雙重功能：一是指示風扇速度，二是顯示濾網是否應更換或清潔。
- 指示燈 1 至 3/4 持續亮起，表示目前風扇速度。
- 指示燈 1 閃爍，表示必須清潔前層濾網。指示燈 2 和/或 3/4 閃爍，表示必須更換對應的濾網。如果指示燈 2 和/或 3/4 閃爍，更換濾網 (REPLACE FILTER) 指示燈亦會同時閃爍 (如需更多資訊，請參閱「更換濾網」單元)。
- 指示燈 2、3/4 及更換濾網 (REPLACE FILTER) 指示燈皆持續亮起時，本產品已鎖住 (如需更多資訊，請參閱「濾網更換鎖」單元)。

調整空氣品質感測器敏感度

患有某些健康問題 (如過敏或氣喘) 的人，更加需要健康的空氣。基於這個原因，本空氣清淨機可調整空氣品質感測器的敏感度。敏感度的等級設為較高時，產品在污染程度較低時就會開始潔淨空氣，讓空氣更加乾淨。

敏感度的等級有 3 種：

- 標準
- 敏感
- 超敏感

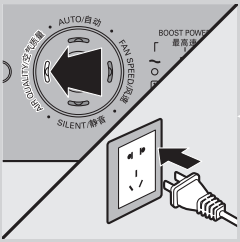

污染感測器的設定為標準敏感度。空氣品質感測器的敏感度可依照下列方式調整：

1 如果產品已經插電，請將產品的插頭拔下，等待幾分鐘。

2 按下空氣品質 (AIR QUALITY) 按鈕，同時將電源插頭插入電源插座。

◗ 產品會發出嗶聲兩次，其中一個風扇速度指示燈會閃爍，顯示空氣品質感測器目前的敏感度等級。

敏感度等級：

風扇速度指示燈	敏感度等級
1	超敏感
2	敏感
3	標準

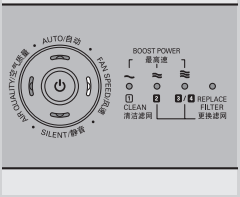

3 按下風扇速度 (FAN SPEED) 按鈕，調整空氣品質感測器的敏感度等級。

◗ 其中一個風扇速度指示燈會閃爍，顯示要設定的空氣品質感測器敏感度等級。

4 按住開關 (On/Off) 按鈕，關閉產品電源。

注意： 若您變更了敏感度等級，產品在開啟電源後，會依照您設定的敏感度等級，自動開始運作。

自動模式

產品電源開啟後，內建的空氣品質感測器會自動檢測周遭環境的空氣品質。啟動自動模式後，產品會根據所檢測到的空氣品質，選擇最適當的風扇速度。

1 按住開關 (On/Off) 按鈕 2 秒鐘，即可開啟產品電源。

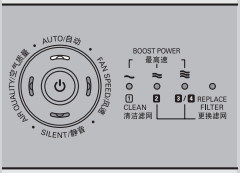

2 按下自動 (AUTO) 按鈕，啟動自動模式。

注意： 若產品以另一種模式運作，但您想要啟動自動模式時，只要按下自動 (AUTO) 按鈕即可。

◗ 自動 (AUTO) 指示燈會亮起。

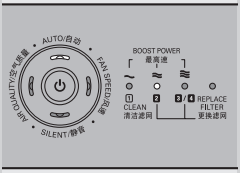

◗ 風扇速度 (FAN SPEED) 指示燈會顯示產品是以何種風扇速度運作。

注意： 當空氣品質非常良好時，產品會以非常低的風扇速度運作，顯示最低風速設定的風扇速度 (FAN SPEED) 指示燈不會亮起。在此情況下，只有電源指示燈與自動 (AUTO) 指示燈會亮起。

注意： 內建空氣品質感測器會檢測空氣品質並自動選擇適當的速度設定，以儘可能確保最佳的室內空氣品質。當空氣乾淨時，產品會停止運作。當空氣品質降低時，產品會以低風扇速度和低噪音等級開始運作，將能源消耗降至最低。

夜間模式

本產品能因應周遭環境協調運作。在自動模式下，產品所處的室內光線變暗時，會自動切換到夜間模式。室內光線變暗長達 3 分鐘，產品的指示燈就會熄滅，風扇速度和噪音等級會降低，耗電量也會降至最低。如果室內光線再度變亮長達 5 分鐘以上，本產品會恢復正常運作。

在夜間模式下，自動控制功能仍然啟動。如果空氣很乾淨，指示燈及風扇就會關閉。如果空氣品質降低，產品就會啟動，而指示燈及風扇會再度開啟。

注意： 產品只有在自動模式下運作時，才會啟動夜間模式。

風扇速度

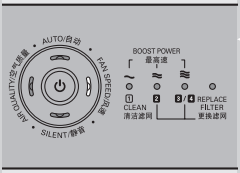

如果不使用自動模式，可選擇所需的風扇速度。

1 按住開關 (On/Off) 按鈕 2 秒鐘，即可開啟產品電源。

2 按下風扇速度 (FAN SPEED) 按鈕一次或多次，選擇所需的風扇速度。

◗ 相對應的風扇速度指示燈與指示燈上方的指示，會顯示設定的風扇速度 (1、2、3、或超高速)。

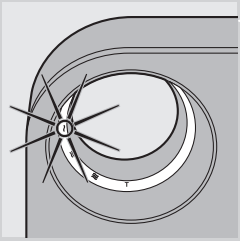

- 僅限 AC4074：風扇速度指示中相對應的風扇速度指示燈會亮起。

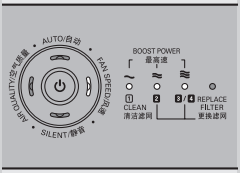

注意： 如果室內空氣很髒，需要超強風速時，請選擇超高速。全部三個風扇速度指示燈都會亮起。

靜音模式

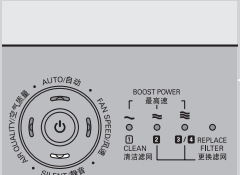

本產品處於靜音模式時，會十分安靜地運作。

1 按住開關 (On/Off) 按鈕 2 秒鐘，即可開啟產品電源。

2 按下靜音 (SILENT) 按鈕，啟動靜音模式。
- 靜音 (SILENT) 指示燈會亮起。

如果想要返回風扇速度 (FAN SPEED) 模式或自動 (AUTO) 模式，只要按下風扇速度 (FAN SPEED) 按鈕或自動 (AUTO) 按鈕即可。

清潔

進行清潔前，請務必先拔離電源插頭。

切勿讓產品浸入水或其他液體中。

切勿使用漂白劑或酒精等刺激性或易燃洗劑清潔產品的任何部分。

只有前層濾網可以水洗，其他濾網「不得」水洗。

產品機體

定期清理機體內部與外殼，可避免內部與外殼累積灰塵。

1 請使用柔軟的乾布擦拭產品的機體。

2 請使用柔軟的乾布清潔進風口及出風口。

前層濾網

前層濾網可水洗。

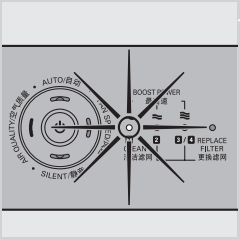

- 第一個更換濾網指示燈閃爍時，請清洗前層濾網，確保產品發揮最佳效果。

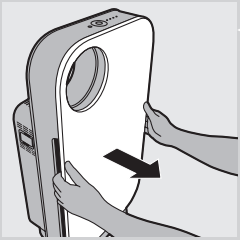

1 將手指放入兩邊護板的凹處，朝自己的方向輕輕拉出產品正面護板的頂部。然後將護板底部的扣鉤自產品底部提起。

2 若要取出前層濾網，抓住濾網上兩個凸出部分，朝向自己拉出。

3 將前層濾網置於水龍頭下清洗。如果前層濾網很髒，請使用軟刷來清除灰塵。

提示： 清潔前層濾網的其他方法，就是使用吸塵器去除灰塵。

4 讓前層濾網自然風乾。

注意： 請確認前層濾網完全乾燥。如果濾網未乾，細菌可能會在濾網中滋生，造成濾網的使用壽命縮短。

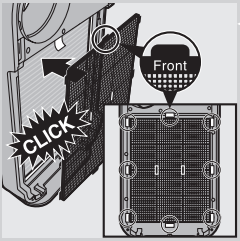

5 將前層濾網裝回產品中，所有扣鉤正確扣入產品。

注意： 請確認有兩個凸出部分的那一側朝向自己。

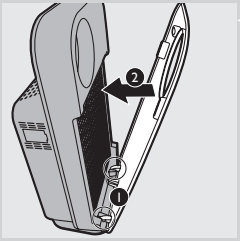

6 若要重新裝入正面護板，先將底部扣鉤裝入本產品底部 (1)，然後將護板推向本產品機體 (2)。

空氣品質感測器

每 2 個月清潔空氣品質感測器，確保產品發揮最佳效果。如果在佈滿灰塵的環境中使用本產品，就要更常清潔空氣品質感測器。

注意： 室內濕度等級很高的時候，空氣品質感測器上可能會凝結水滴，如此一來，即使空氣品質良好，控制面板上的空氣品質 (AIR QUALITY) 指示燈及空氣品質指示燈圈可能會顯示空氣品質不良。在此情況下，必須清潔空氣品質感測器，或使用手動風速設定。

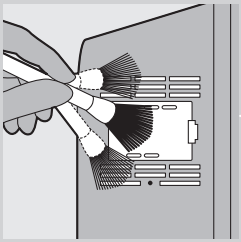

1 請使用軟刷，清潔空氣品質感測器的進風口及出風口。

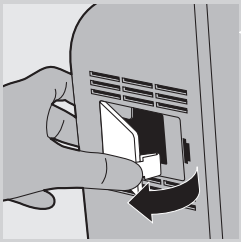

2 取下空氣品質感測器的護蓋。

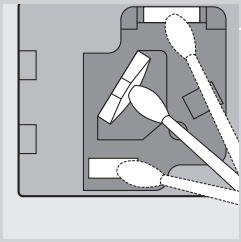

3 請使用略濕的棉棒，清潔空氣品質感測器、進風口、出風口。

4 使用乾的棉棒擦乾。

5 裝上空氣品質感測器的護蓋。

更換濾網

保養濾網

本空氣清淨機配備健康空氣保護鎖 (HealthyAirProtect Lock) 功能，可確保濾網在產品運作時處於最佳狀態。當濾網阻塞而必須清潔或更換時，對應的更換濾網指示燈會開始閃爍。若不更換濾網 2、濾網 3、和/或濾網 4，產品會停止運作，然後鎖定。
產品鎖定後，對應濾網的更換濾網指示燈會持續亮起。

注意： 只有在濾網的更換指示燈閃爍時才需更換濾網。若在更換濾網指示燈開始閃爍之前就更換濾網，使用壽命計時器不會重設，而會持續計算原濾網的使用壽命。結果會造成更換濾網指示燈太早開始閃爍。

更換濾網指示燈

更換濾網指示燈會顯示哪一個濾網必須清潔或更換。

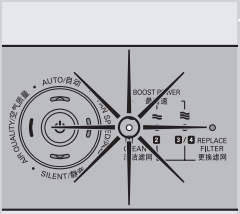

- 更換濾網指示燈 1 閃爍：濾網 1 (前層濾網) 必須清潔。如需進一步說明，請參閱「清潔」單元。

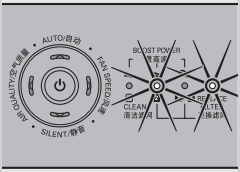

- 更換濾網指示燈 2 閃爍：濾網 2 (甲醛濾網 (供應與 A4074) 或全效濾網 (供應與 AC4702)) 必須更換。

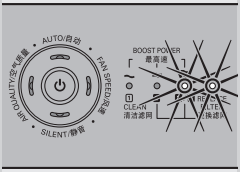

- 更換濾網指示燈 3/4 閃爍：活性碳濾網與 HEPA 濾網必須更換。

注意： HEPA 濾網與活性碳濾網的使用壽命差不多，因此必須同時更換。

更換濾網鎖

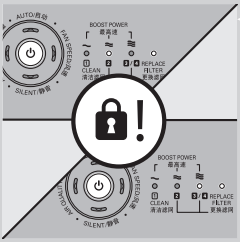

如果不即時更換濾網，本產品會在更換濾網指示燈開始閃爍約 2 週後停止運作。產品鎖定後，必須更換濾網，並按下重設按鈕才能恢復運作。

注意： 當濾網更換指示燈 2 或 3/4 以及控制面版上的更換濾網 (REPLACE FILTER) 指示持續亮起，本產品已鎖定 (請參閱本章節中的「濾網保養」部分，取得詳細資訊)。
產品會在多久時間後鎖住，則根據更換濾網警示燈亮起後的運作時間與所選的速度等級而定。
本產品進入鎖定狀態的前 1 天，每隔 30 分鐘會發出嗶聲，提示有濾網需要更換。
本產品鎖住後，按下任何一個按鈕，都會聽見嗶聲。您可以按下開關 (On/Off) 不放，以關閉產品電源。
如果產品已鎖住：

1 檢查哪個濾網需要更換 (請參閱「更換濾網警示燈」單元)。

2 關閉產品電源，並拔除插頭。

3 更換對應的濾網 (請參閱「更換濾網」)。

更換濾網

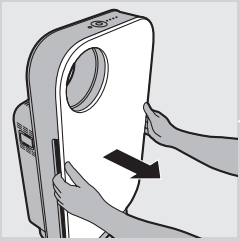

提示： 取出或裝入濾網時，將本產品靠牆擺放可獲得較穩定的支撐。

1 關閉產品電源，並拔除插頭。

2 將手指放入兩邊護板的凹處，朝自己的方向輕輕拉出產品正面護板的頂部。然後將護板底部的扣鉤自產品底部提起。

3 若要取出濾網 1 (即前層濾網)，抓住濾網上兩個凸出部分，朝向自己拉出。

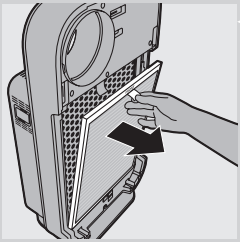

4 若要取出濾網 2 (AC4074 的甲醛濾網或 AC4072 的全效濾網)，抓住濾網拉片，朝向自己拉出。

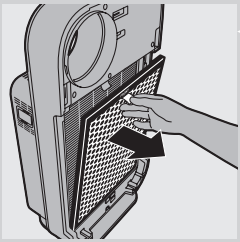

5 若要取出濾網 3 (活性碳濾網)，抓住濾網拉片，朝向自己拉出。

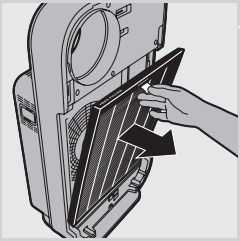

6 若要取出濾網 4 (HEPA 濾網)，抓住濾網拉片，朝向自己拉出。

7 丟棄已用的濾網，拆開新濾網的包裝。

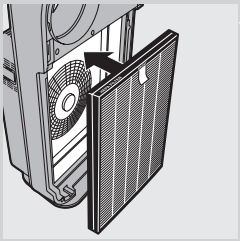

8 將濾網 4 (HEPA 濾網) 裝回產品。

注意： 請確認有拉片的那一側朝向自己。

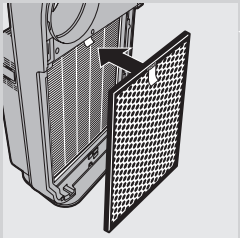

9 將濾網 3 (活性碳濾網) 裝回產品。

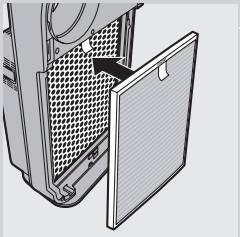

10 將濾網 2 (AC4074 的甲醛濾網或 AC4072 的全效濾網) 裝回產品。

注意： 請確認有拉片的那一側朝向自己。

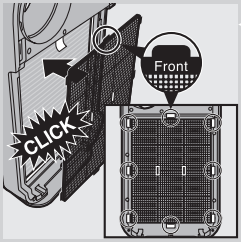

11 將濾網 1 (前層濾網) 裝回產品。

注意： 請確認有兩個凸出部分的那一側朝向自己。

注意： 請確認所有扣鉤皆已正確裝入產品。

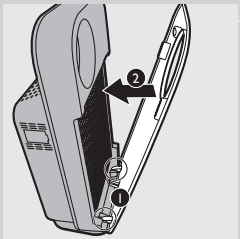

12 若要重新裝入正面護板，先將底部扣鉤裝入產品底部 (1)，然後將護板推回產品機體 (2)。

13 請將插頭插入電源插座，再度開啟產品電源。

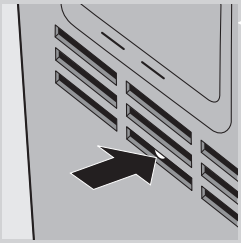

14 利用細長的工具，按下濾網重設按鈕。

注意： 清潔濾網 1 (前層濾網) 之後，不需按下濾網重設按鈕。

注意： 若在更換濾網指示燈開始閃爍之前即更換濾網，就無法重設本產品。

注意： 如果未插插頭或未開啟電源，您便無法重設本產品。

收納

1 請將電源線纏繞在產品底部的電源線捲線裝置上，加以收納。

配件

我們提供下列型號的新濾網：

濾網	型號
濾網 2：甲醛濾網	AC4142
濾網 2：全效濾網	AC4141
濾網 3：活性碳濾網	AC4143
濾網 4：HEPA 濾網	AC4144

環境保護

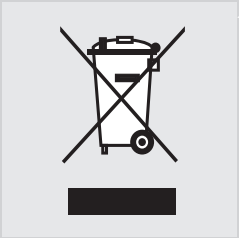

- 本產品壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。

保證書與服務

若您需要相關資訊，或是有任何問題，請瀏覽飛利浦網站，網址為 www.philips.com，或連絡您當地的飛利浦顧客服務中心 (您可以在全球保證書上找到連絡電話)。若您當地沒有顧客服務中心，請洽詢當地的飛利浦經銷商。

故障排除

本單元概述您使用本產品時最常遇到的問題。如果您無法利用以下資訊解決您遇到的問題，請聯絡您所在國家/地區的顧客服務中心。

問題	可能的解決方法
產品不能運作。	若您忽略更換濾網警示燈，在更換濾網指示燈開始閃爍時未更換濾網，且在 2 週後產品開始每隔 30 分鐘發出嗶聲時，並未因應處理。因此產品已鎖住，您必須更換濾網並重設本產品 (請參閱「更換濾網」單元)，才可再度運作。
出風口沒有空氣流出	產品電源沒有開啟，請將插頭插入電源插座，開啟產品電源。
	空氣品質良好，且自動模式啟動，在此情況下，產品會在空氣乾淨時自動關閉電源，以節省電力。
自動模式啟動時，風扇速度沒有改變。	室內光線變暗時，若產品處於自動模式，夜間模式會自動啟動，此時，風扇速度會設得很低。如果想要更改風速，請按下風扇速度 (FAN SPEED) 按鈕一次或多次，設定所需的風扇速度。
出風口流出的風速比之前慢。	前層濾網髒污，請清潔前層濾網 (請參閱「清潔」單元)。
	您尚未拆下濾網的所有包裝材料，請確認已移除所有包裝材料。
即使本產品已經長時間運作，空氣品質仍未獲得改善。	其中一個濾網尚未放入產品中，請確認所有濾網都已按照下列順序正確安裝，濾網從內至外分別為：(1) HEPA 濾網；(2) 活性碳濾網；(3) 甲醛濾網 (供應與 AC4074) 或全效濾網 (供應與 AC4072)；(4) 前層濾網。
	空氣品質感測器潮濕。室內的濕度等級很高，造成水珠凝結。請確認空氣品質感測器乾淨且乾燥 (請參閱「清潔」單元)。
	本產品放置在超過 55 平方公尺的空間裡，本空氣清淨機可有效運作的空間不得超過 55 平方公尺。
空氣品質指示燈圈及空氣品質指示燈的顏色一直維持不變。	空氣品質感測器髒污，請清潔空氣品質感測器 (請參閱「清潔」單元)。
	室內空氣不夠流通，請開窗，促進空氣對流。
我會過敏，需要更乾淨的空氣。	您可以變更空氣品質感測器敏感度 (請參閱「使用本產品」單元)，讓空氣清淨機把空氣清潔得更加徹底。
產品噪音很大。	您尚未拆下濾網的所有包裝材料，請確認已移除所有包裝材料。
產品不斷要求更換濾網，但濾網已經更換了。	您可能未確實按下濾網重設按鈕。請為本產品插上電源，按下開關 (On/Off) 不放，然後使用扁平工具按下濾網重設按鈕。
產品停止運作，而電源指示燈仍亮起。	內建空氣品質感測器判定空氣品質良好，因此不再需要清潔空氣。當空氣品質降低時，產品會以低風扇速度和低噪音等級開始運作，將能源消耗降至最低。

产品简介

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持服务，请登陆 www.philips.com/welcome 网站注册您的产品。有了这款全新的空气净化器，您可以呼吸到更洁净的空气。为获得至佳效果，请将该空气净化器放置在您停留时间最长的处所，如客厅或卧室。

有人、植物或宠物的地方，空气中就会有悬浮颗粒。空气中的悬浮颗粒可能影响您的健康，如果您患有过敏症，则尤其如此。由于这些悬浮颗粒的存在，房间内的空气污染可能比大城市的室外空气污染更严重。

一般而言，悬浮颗粒是看不见的，并且没有异味。但它会影响您的健康。高效能空气净化器可减少空气中动物皮屑以及工业污染物的含量，因此能够改善空气质量。它还能过滤掉体积大于 20 纳米的微小颗粒，这包括细菌和部分病毒。而世界卫生组织的刊物显示，禽流感、人流感病毒和军团症细菌均大于 20 纳米。

多重过滤

该空气净化器具有独特的多重过滤系统，可保证至佳的空气质量：

- 第 1 重：预过滤网经过抗菌物质处理，可滤除头发、宠物毛发等较大颗粒。
- 第 2 重：甲醛过滤网（随 AC4074 提供）可过滤掉甲醛及其它挥发性有机化合物 (VOC)。与 HEPA 过滤网相结合，多重过滤网可过滤掉大于 20 纳米的灰尘、过敏原和微小颗粒，包括细菌和部分病毒。世界卫生组织的刊物显示，禽流感、人流感病毒和军团症细菌均大于 20 纳米。

注意：AC4074 和 AC4072 均适合使用甲醛过滤网和多功能过滤网。为您的空气净化器更换过滤网时，可选择更符合需要的过滤网（甲醛过滤网或多功能过滤网）。

- 第 3 重：活性炭过滤网能够有效去除异味和有害气体。
- 第 4 重：高性能复合 HEPA 过滤网具有抗菌涂层，可有效过滤细小的灰尘和烟气，同时有机抗菌材料的抗菌和防霉功能也可以抑制细菌和霉菌。

一般说明 (图 1)

A 空气质量光环
B 风扇速度指示（仅适用于 AC4074）
C 空气质量传感器出风口
D 空气质量传感器
E 空气质量传感器进风口
F 手柄
G 出风口
H 进风口
I 电源线存储装置
J 电源线
K 控制面板
- **1** 光传感器（适合夜间模式）
- **2** 带指示灯的 AIR QUALITY 开/关按钮
- **3** 开/关按钮
- **4** SILENT（静音）按钮（带指示灯）
- **5** 电源指示灯
- **6** FAN SPEED（风速）按钮（带指示灯）
- **7** AUTO 自动按钮（带指示灯）

8 风扇速度指示灯（1、2、3 和最高风速）/过滤网更换指示灯
9 风速指示
10 更换滤网指示

L 过滤网 4：HEPA 过滤网
M 过滤网 3：活性炭过滤网
N 过滤网 2：甲醛过滤网（对应于 AC4074）或多功能过滤网（对应于 AC4072）
O 过滤网 1：预过滤网
P 前面板

注意事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

危险

- 切勿让水或任何其它液体或易燃性清洁剂进入产品，以免发生触电和（或）火灾。
- 切勿用水或任何其它液体或（易燃性）清洁剂来清洁产品，以免发生触电和（或）火灾。

警告

- 在将产品接通电源以前，首先确认产品底部所标示的电压是否与当地的电压相符。
- 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员来更换。
- 如果插头、电源线或产品本身受损，请勿使用本产品。
- 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产品进行监督或指导。
- 应照看好儿童，确保他们不玩耍该产品。
- 请勿堵塞进风和出风口，例如不要将物体放置在出风口上或进风口前方。

注意

- 本产品不能替代正常通风、日常吸尘或者在烹饪时使用的抽油烟机。
- 如果连接产品的电源插座接触不良，则产品的插头会发热。确保您所连接的插座接触良好。
- 一定要在干燥、稳固、平整且水平的表面上放置和使用本产品。
- 产品的后侧及两侧均要留出至少 20 厘米的空间，产品上方至少要留出 30 厘米的空间。
- 切勿在产品顶部放置任何物品，也不要坐在产品上。
- 切勿将产品直接放在空调下方，以防冷凝水滴到产品中。
- 打开产品电源之前，务必确保已经正确安装所有过滤网。
- 只能使用飞利浦专门为本产品设计的原装过滤网，切勿使用任何其它过滤网。
- 请勿用硬物敲击本产品（尤其是进风口和出风口）。
- 请始终用产品背面的手柄提拉或移动产品。
- 请勿将手指或其它物体插入出风口。
- 当您使用室内喷雾式驱虫剂或在充满易燃气体的地方时，请勿使用本产品。
- 请勿在气体用具、加热装置或火炉附近使用本产品。
- 使用之后和清洁产品前，务必先将电源插头拔掉。

- 请勿在温度变化较大的房间内使用本产品，因为这可能导致产品内部的冷凝。
- 为防止干扰，请将产品放置在距离使用空中电波的电器（例如电视机、收音机和无线电控制时钟）至少 2 米的距离。
- 本产品仅限于家用并在正常运行条件下使用。
- 请勿在潮湿环境或高温环境中（例如浴室、卫生间或厨房）使用本产品。
- 本产品不能去除一氧化碳 (CO) 或氡 (Rn)，因此在发生燃烧和危险化学品事故时，不能作为安全设备使用。

电磁场 (EMF)

这款飞利浦产品符合关于电磁场 (EMF) 的相关标准。据目前的科学证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

初次使用之前

安装过滤网

本产品内部随附了所有过滤网，但是使用产品之前，务必首先除去过滤网的包装。请按以下说明卸下所有过滤网并除去其包装，然后重新放回产品中。

提示： 在取下或插入过滤网之前，请将产品靠墙摆放以使其更稳固。

注意： 务必将过滤网插到正确位置。

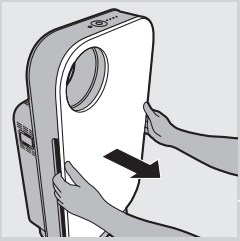

1 将手指放在侧面板的凹处，然后面向您的方向轻轻拉出前面板的上半部分。提拉面板底部的挂钩，将其从产品底部拉出来。

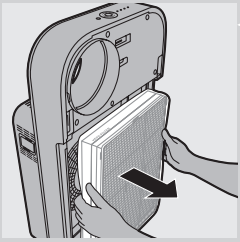

2 卸下产品内部的所有过滤网。

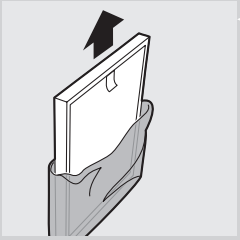

3 除去过滤网上的所有包装材料。

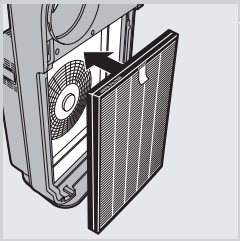

4 将过滤网 4（HEPA 过滤网）放回产品内部。

注意： 确保带拉片的一面朝向您。

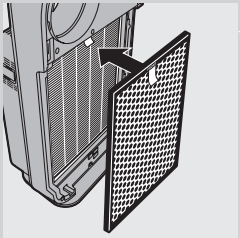

5 将过滤网 3（活性炭过滤网）放回产品内部。

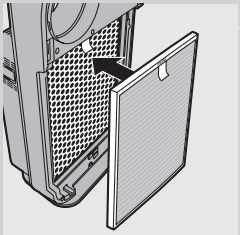

6 将过滤网 2（对应于 AC4074 的甲醛过滤网或对应于 AC4072 的多功能过滤网）放回产品内部。

注意： 确保带拉片的一面朝向您。

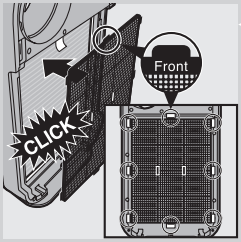

7 将过滤网 1（预过滤网）放回产品内部。

注意： 确保带两个凸缘的一面朝向您。

注意： 确保所有挂钩均已正确连接到产品上。

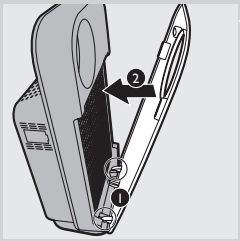

8 要装回前面板，请首先将底部的挂钩插到产品底部 (1)。然后，朝产品机身方向推动面板 (2)。

使用本产品

1 将插头插入插座

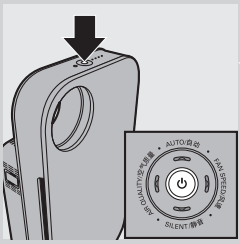

- 所有指示灯将亮起两次，您将听到一声哔声。之后，指示灯将再次熄灭。

2 按住开/关按钮 2 秒钟以打开产品。

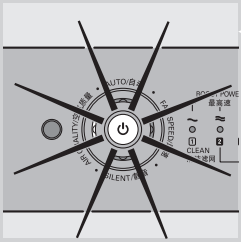

- 此时，控制面板上的电源指示灯和 AIR QUALITY（空气质量）指示灯将亮起。

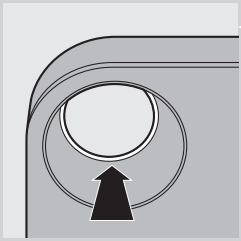

- 空气质量光环将显示空气质量。

空气质量指示

颜色	空气质量
蓝色	非常好
深紫色	良好
紫色	一般
红色	较差

要关闭空气质量光环，请按 AIR QUALITY（空气质量）按钮。

注意： 在打开本产品时，空气质量光环将自动打开。
- 产品在 AUTO（自动）模式下将自动运行。

要关闭产品，请再次按住开/关按钮，直至电源指示灯熄灭，然后拔下产品的电源插头。

注意： 当室内的湿度非常高时，空气质量传感器上可能会形成冷凝水。此时，即使空气质量很好，控制面板上的 AIR QUALITY（空气质量）指示灯及空气质量光环可能也会指示空气质量较差。在这种情况下，自动模式将使产品的风扇高速运转。要解决这一问题，您可以清洗一下空气质量传感器。如果在湿度很高的时候经常形成冷凝水，建议您使用任一手动速度设置。

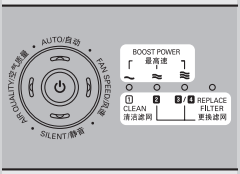

风扇速度指示灯/过滤网更换指示灯

- 控制面板右侧的指示灯具有双重功能：它们既可以指明风扇速度，也可以指明应该更换或清洗过滤网。
- 当指示灯 1 至 3/4 连续亮起时，表示当前的风扇速度。
- 当指示灯 1 闪烁时，表示您必须清洗预过滤网。当指示灯 2 和/或 3/4 闪烁时，表示您必须更换这些过滤网。如果指示灯 2 和/或 3/4 闪烁，则 REPLACE FILTER（更换过滤网）指示灯也会闪烁（有关详细信息，请参阅“更换过滤网”一章）。
- 当指示灯 2、3/4 及 REPLACE FILTER（更换过滤网）指示灯持续亮起时，表示产品已被锁定（有关详细信息，请参阅“更换过滤网”一章）。

调节空气质量传感器的灵敏度

存在某些健康问题（例如过敏症或哮喘）的人更需要健康的空气。出于这种考虑，本空气净化器可以调整空气质量传感器的灵敏度。如果将它设置为较高的灵敏度级别，则本产品还会清洁污染程度较低的空气，使空气前所未有地清新！

灵敏度分为三个级别:

- 标准
- 灵敏
- 超级灵敏

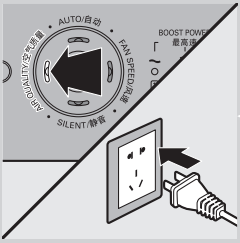

污染传感器设置为标准灵敏度。您可通过以下方法调节空气质量传感器的灵敏度:

1 如果产品已经插电，请拔下电源插头并等待几分钟。

2 按 AIR QUALITY（空气质量）按钮，同时将电源插头插到插座上。

◗ 此时，产品将发出两声哔声，并且风扇速度指示灯之一开始闪烁，以指明空气质量传感器的灵敏度级别。

灵敏度级别:

风扇速度指示灯	灵敏度级别
1	超级灵敏
2	灵敏
3	标准

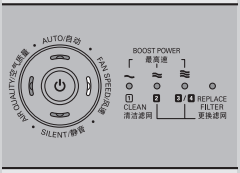

3 按 FAN SPEED（风速）按钮调节空气质量传感器的灵敏度。

◗ 其中一个风扇速度指示灯闪烁，显示设定的空气质量传感器灵敏度。

4 按住开/关按钮关闭产品。

注意: 当您更改灵敏度之后，只要打开产品，它就会按照您设置的灵敏度开始运行。

自动模式

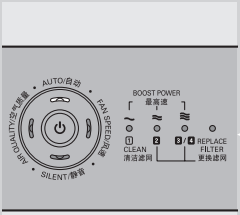

打开产品之后，内置的空气质量传感器将自动测量室内的空气质量。激活自动模式之后，产品将根据测定的空气质量选择最合适的风扇速度。

1 按住开/关按钮 2 秒钟以打开产品。

2 按 AUTO（自动）按钮激活自动模式。

注意： 当产品在其它模式下运行时，如果您想激活自动模式，只需按 AUTO 自动按钮。

- 此时，AUTO（自动）指示灯将亮起。

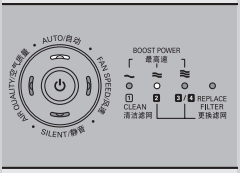

- FAN SPEED（风速）指示灯将指明产品运行时的风扇速度。

注意： 当空气质量非常好时，本产品将以很低的速度运行；当风扇以最低速度设置运行时，FAN SPEED 风速指示灯将不亮起。在此情况下，只有开机指示灯和 AUTO 自动指示灯亮起。

注意： 内置空气质量感应器可测定空气质量并自动选择相应的风速设定，以保证室内空气处于最佳质量。当空气洁净时，产品将停止运转。如果空气质量变差，则产品将开始以较低的风速和噪音级别运行，以将能耗保持在最低水平。

夜间模式

本产品可以与周围环境协调工作。在自动模式下，当室内环境变暗时，产品将自动切换至夜间模式。当室内环境变暗 3 分钟后，产品的指示灯将熄灭，风扇速度和噪音级别也会降低，同时能耗降至最低。如果室内环境重新变得明亮并且时间持续 5 分钟或更长，则产品将恢复正常运行。

在夜间模式下，自动控制功能仍然生效。如果空气干净清新，指示灯和风扇将会关闭。如果空气质量较差，产品将被激活，指示灯和风扇也将重新打开。

注意： 夜间模式仅适用于产品在自动模式下工作的情况。

风扇速度

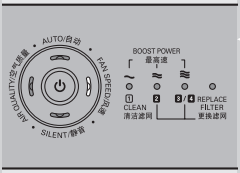

如果不使用自动模式，您可以自行选择需要的风扇速度。

1 按住开/关按钮 2 秒钟以打开产品。

2 按一下或按几下 FAN SPEED 风速按钮，选择所需的风扇速度。

- 之后，对应的风扇速度指示灯及指示灯上方的指示将显示设置的风扇速度（1、2、3 或增强功率）。

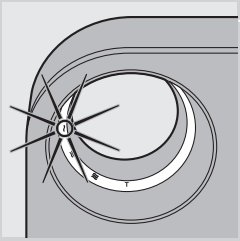

- 仅限于 AC4074：风扇速度指示中对应的风扇速度指示灯将亮起。

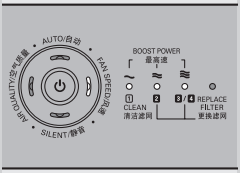

注意： 当室内空气非常污浊时，如果需要超强气流，请选择增强功率。此时，三个风扇速度指示灯将全部亮起。

静音模式

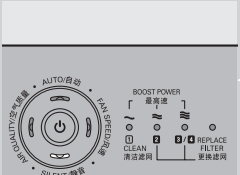

当您在静音模式下使用本产品时，它将非常安静地运行。

1 按住开/关按钮 2 秒钟以打开产品。

2 按 SILENT 按钮激活静音模式。
- 此时，SILENT（静音）指示灯将亮起。

如果要返回至 FAN SPEED（风扇速度）模式或 AUTO（自动）模式，只需按 FAN SPEED 或 AUTO 按钮。

清洁

清洁产品前，务必先将电源插头拔掉。

切勿将本产品浸入水中或任何其它液体中。

切勿使用具有腐蚀性或易燃性的清洁剂（例如漂白剂或酒精）清洁本产品的任何部件。

只有预过滤网可以水洗，其它过滤网全部不可水洗。

产品机身

定期清洁机身的内侧和外侧可防止灰尘积聚在内侧和外侧。

1 使用柔软的干布擦去产品机身上的灰尘。

2 使用柔软的干布清洁进风口和出风口。

预过滤网

预过滤网

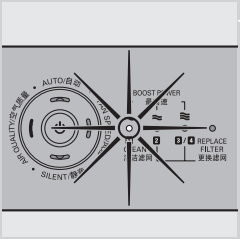

- 当第一个过滤网更换指示灯闪烁时，请清洗预过滤网，确保产品以最佳性能运行。

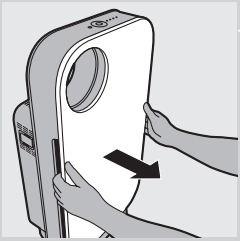

1 将手指放在侧面板的凹处，然后面向您的方向轻轻拉出前面板的上半部分。提拉面板底部的挂钩，将其从产品底部拉出来。

2 要卸下预过滤网，请抓住两个凸缘，然后朝您自己的方向拉动过滤网。

3 在水龙头下冲洗预过滤网。如果很脏，请使用软刷清除上面的灰尘。

提示： 您也可以使用吸尘器来除去上面的灰尘，从而达到清洁预过滤网的目的。

4 晾干预过滤网。

注意： 确保预过滤网完全晾干。如果仍然是湿的，细菌可能会乘虚而入，因此缩短预过滤网的使用寿命。

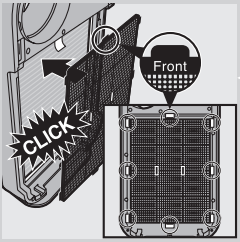

5 将预过滤网放回产品内部，然后将所有挂钩正确连接到产品上。

注意： 确保带两个凸缘的一面朝向您。

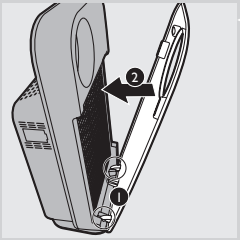

6 要装回前面板，请首先将底部的挂钩插到产品底部 (1)。然后，朝产品机身方向推动面板 (2)。

空气质量传感器

每 2 个月清洁一次空气质量传感器，确保产品以最佳性能运行。如果产品用在多尘的环境中，请经常进行清洁。

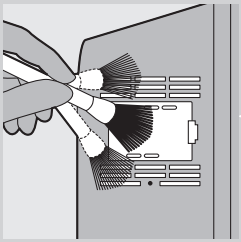

注意： 当室内的湿度非常高时，空气质量传感器上可能会形成冷凝水。此时，即使空气质量很好，控制面板上的 AIR QUALITY（空气质量）指示灯及空气质量光环可能也会指示空气质量较差。在这种情况下，您必须清洁空气质量传感器或者使用任一手动速度设置。

1 使用软刷清洁空气质量传感器进风口/出风口。

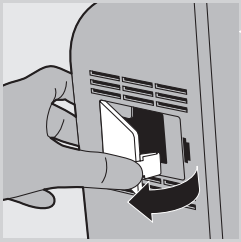

2 卸下空气质量传感器的保护盖。

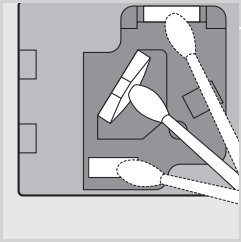

3 使用稍微浸湿的棉签，清洁空气质量传感器、进风口和出风口。

4 使用干棉签将其擦干。

5 重新装上空气质量传感器的保护盖。

更换过滤网

维护过滤网

本空气净化器具有 HealthyAirProtect（健康空气智能锁）锁定功能，旨在确保产品运行过程中，过滤网在最佳条件下工作。当任一过滤网几乎盛满灰尘并且必须予以清洁或更换时，对应的过滤网更换指示灯将开始闪烁。如果您没有更换过滤网 2、3 和/或 4，产品将停止运行并被锁定。
一旦产品锁定，相关过滤网指示灯中的更换指示灯将持续亮起。

注意： 只有在对应的过滤网更换指示灯闪烁时，才能更换过滤网。如果在更换指示灯开始闪烁前更换过滤网，使用寿命计数器将不会重置，并将继续计算前一个过滤网的使用寿命。因此，过滤网更换指示灯很快就会开始闪烁。

过滤网更换指示灯

过滤网更换指示灯将指明需要清洁或更换哪个过滤网。

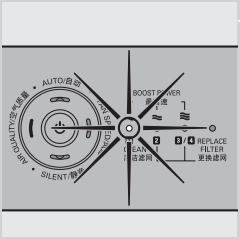

- 过滤网更换指示灯 1 闪烁：必须清洁过滤网 1（预过滤网）。有关详细说明，请参阅“清洁”一章。

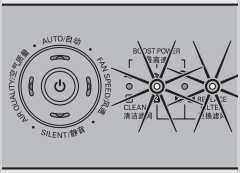

- 过滤网更换指示灯 2 闪烁：必须更换过滤网 2（甲醛过滤网，对应于 AC4074；或多功能过滤网，对应于 AC4072）。

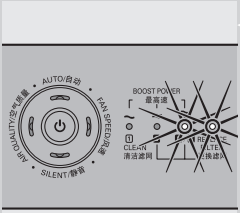

- 过滤网更换指示灯 3/4 闪烁：必须更换活性炭过滤网及 HEPA 过滤网。

注意： HEPA 过滤网与活性炭过滤网的使用寿命相似，因此它们必须同时更换。

过滤网更换锁定

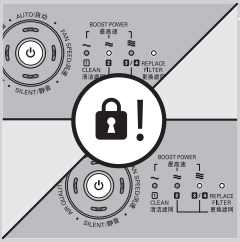

如果没有及时更换过滤网，则在过滤网更换指示灯开始闪烁后，产品将停止运行约 2 周。一旦产品锁定，只有在更换过滤网并按重置按钮之后，它才会恢复运行。

注意： 当控制面板上的过滤网更换指示灯 2 或 3/4 以及 REPLACE FILTER（更换滤网）指示灯持续亮起时，产品即已锁定（详细信息，请参阅本章中的“维护过滤网”部分）。
产品锁定前所能使用的时间取决于发出过滤网更换提醒后选择的运行时间和速度级别。
产品锁定之前 1 天左右，它会每 30 分钟发出一声哔声，提醒您某个过滤网需要更换。
产品锁定之后，无论按哪个按钮，您都会听到一声哔声。您可以通过按住开/关按钮来关闭产品。
如果产品锁定：

1 检查是否需要更换过滤网（请参阅“过滤网更换提醒”一节）。

2 关闭产品并拔下电源插头。

3 更换相应的过滤网（请参阅“更换过滤网”一节）。

更换过滤网

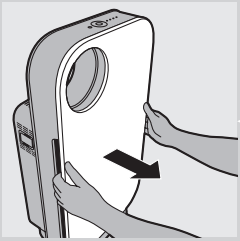

提示： 在取下或插入过滤网之前，请将产品靠墙摆放以使其更稳固。

1 关闭产品并拔下电源插头。

2 将手指放在侧面板的凹处，然后面向您的方向轻轻拉出前面板的上半部分。提拉面板底部的挂钩，将其从产品底部拉出来。

3 要卸下过滤网 1（预过滤网），请抓住两个凸缘，然后朝您的方向拉动过滤网。

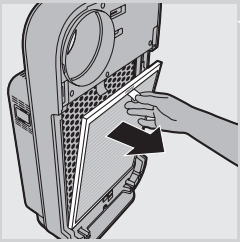

4 要卸下过滤网 2（对应 AC4074 的甲醛过滤网；对应 AC4072 的多功能过滤网），请抓住其拉片，然后朝您的方向拉动。

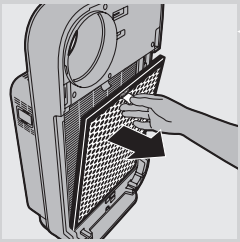

5 要卸下过滤网 3（活性炭过滤网），请抓住其拉片，然后朝您的方向拉动。

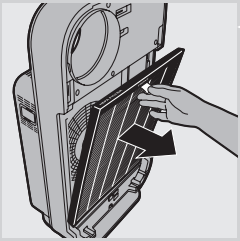

6 要卸下过滤网 4（HEPA 过滤网），请抓住其拉片，然后朝您的方向拉动。

7 丢弃需要更换的过滤网，然后除去新过滤网的包装。

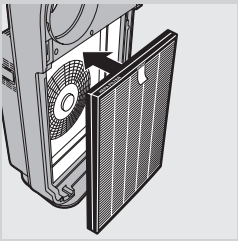

8 将过滤网 4（HEPA 过滤网）放回产品内部。

注意： 确保带拉片的一面朝向您。

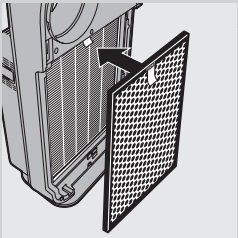

9 将过滤网 3（活性炭过滤网）放回产品内部。

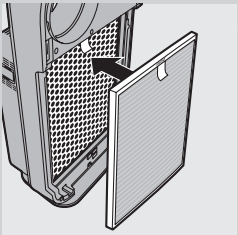

10 将过滤网 2（对应 AC4074 的甲醛过滤网或 AC4072 的多功能过滤网）放回产品内部。

注意： 确保带拉片的一面朝向您。

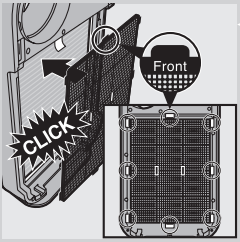

11 将过滤网 1（预过滤网）放回产品内部。

注意： 确保带两个凸缘的一面朝向您。

注意： 确保所有挂钩均已正确连接到产品上。

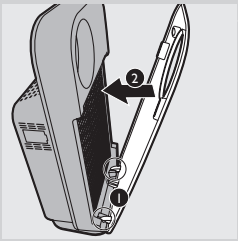

12 要装回前面板，请首先将底部的挂钩插到产品底部 (1)。然后，朝产品机身方向推动面板 (2)。

13 重新将插头插入电源插座并打开产品。

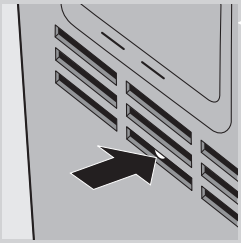

14 使用较细的工具按下过滤网重置按钮。

注意： 清洁过滤网 1（预过滤网）之后，无需按过滤网重置按钮。

注意： 在更换过滤网的过程中，在对应的过滤网更换指示灯开始闪烁之前，您将无法重置产品。

注意： 必须接通电源并启动产品，才能重置产品。

存储

1 要存放电源线，请将它缠绕在产品底部的线缆存放装置上。

附件

以下型号的新过滤网可供选择：

过滤网	型号
过滤网 2：甲醛过滤网	AC4142
过滤网 2：多功能过滤网	AC4141
过滤网 3：活性炭过滤网	AC4143
过滤网 4：HEPA 过滤网	AC4144

环境

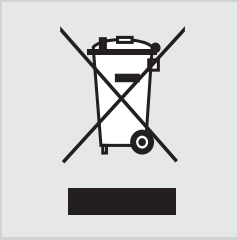

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心。这样做有利于环保。

保修和服务

如果您需要了解信息，或者有任何疑问，请访问飞利浦网站：www.philips.com。您也可与您所在地的飞利浦顾客服务中心联系（可从全球保修卡中找到其电话号码）。如果您的所在地没有飞利浦顾客服务中心，则可以与当地的飞利浦经销商联系。

故障种类和处理方法

本章归纳了使用本产品时最可能遇到的问题。如果您无法根据下面的信息解决问题，请与贵国（地区）的飞利浦客户服务中心联系。

问题	可能的解决方法
产品不能启动。	您忽视了过滤网更换提醒。当过滤网更换指示灯开始闪烁时，您没有更换过滤网；在约 2 周后，当产品开始每 30 分钟发出一声哔声时，您没有及时回应。因此，产品现在已经锁定，您必须更换过滤网并重置产品（请参阅“更换过滤网”一章），然后产品才能重新运行。
出风口中没有排出空气	产品没有打开。请将插头插入电源插座并且打开产品。
	空气质量很好，而且自动模式已经激活。在这种情况下，当空气干净清新时，产品将自动关闭以达到节能的目的。
在激活 AUTO（自动）模式后，风扇速度没有变化。	当室内变暗时，处于自动模式下的产品将自动激活夜间模式。在这种情况下，风扇速度将设置为很低的级别。如果要更改风扇速度，请按一次或按多次 FAN SPEED（风速）按钮，设置所需的风扇速度。
出风口排出的气流比之前明显减弱。	预过滤网很脏。请清洁预过滤网（请参阅“清洁”一章）。
	您没有除去过滤网上的所有包装材料。请确保您已经除去所有包装材料。
即使在产品已经运行很长时间以后，空气质量也没有显著提高。	某一过滤网可能没有放在产品内部。请确保按以下顺序正确安装所有过滤网，首先从最里面的过滤网开始：1) HEPA 过滤网；2) 活性炭过滤网；3) 甲醛过滤网（对应于 AC4074）或多功能过滤网（对应于 AC4072）；4) 预过滤网。
	空气质量传感器是湿的。室内湿度过高，因此形成了冷凝水。请确保空气质量传感器清洁干燥（请参阅“清洁”一章）。
	产品所在房间的面积超过 55m²，而这是本空气净化器的最佳有效使用范围。
空气质量光环和空气质量指示灯的颜色始终相同。	空气质量传感器很脏。请清洁空气质量传感器（请参阅“清洁”一章）。
	室内通风不足。请打开窗户，改善空气流通条件。
我是过敏症患者，需要更干净清新的空气。	您可以更改空气质量传感器的灵敏度（请参阅“使用本产品”一章），使本空气净化器更全面细微地净化空气。
产品声音过大。	您没有除去过滤网上的所有包装材料。请确保您已经除去所有包装材料。
我已经更换过了过滤网，但是产品还是一直说需要更换过滤网。	可能是您没有正确按下过滤网重置按钮。请将产品插电，按住开/关按钮，然后使用扁平的工具按下过滤网重置按钮。
产品停止运行，尽管通电指示灯仍在亮起。	内置空气质量感应器确定空气质量良好，无需再进行净化。当空气质量变差时，产品将开始以较低的风速和噪音级别运行，以将能耗保持在最低水平。

PHILIPS

产品 ：飞利浦空气净化器
型号 ：AC4072
额定电压 ：220V~
额定频率 ：50Hz
额定输入功率：47 W
生产日期 ：请见产品底部
产地 ：韩国

飞利浦(中国)投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标GB4706.1-1998，GB4706.45-1999制造

PHILIPS

产品 ：飞利浦空气净化器
型号 ：AC4074
额定电压 ：220V~
额定频率 ：50Hz
额定输入功率：47 W
生产日期 ：请见产品底部
产地 ：韩国

飞利浦(中国)投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标GB4706.1-1998，GB4706.45-1999制造

请妥善保管本使用说明书
发行日期： 2009/09/26

100% recycled paper
100% papier recyclé

www.philips.com

4222.002.7314.4